


INSTALLATION INSTRUCTIONS





6.0 m (20') curtain detection area at 4.5 m (14'9") mounting height

<< Contents >>

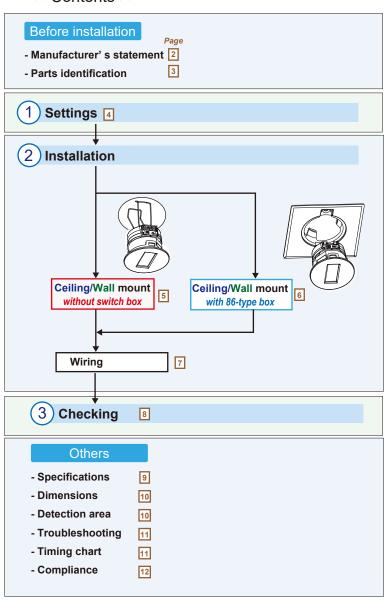

Before installation

- Manufacturer's statement


Symbol Meaning


Check mark indicates recommendation.

Nix sign indicates prohibition.


Caution Failure to follow the instructions provided with this indication and improper handling may cause death or serious injury.


Note Special attention is required to the section of this symbol.

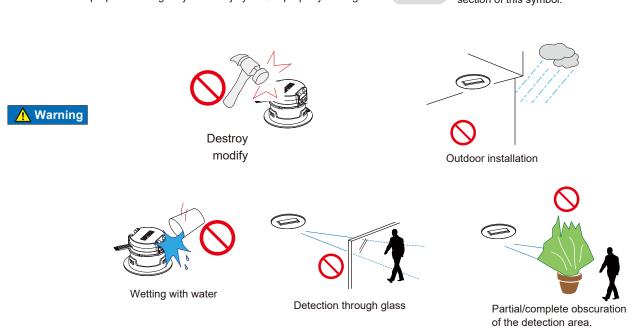

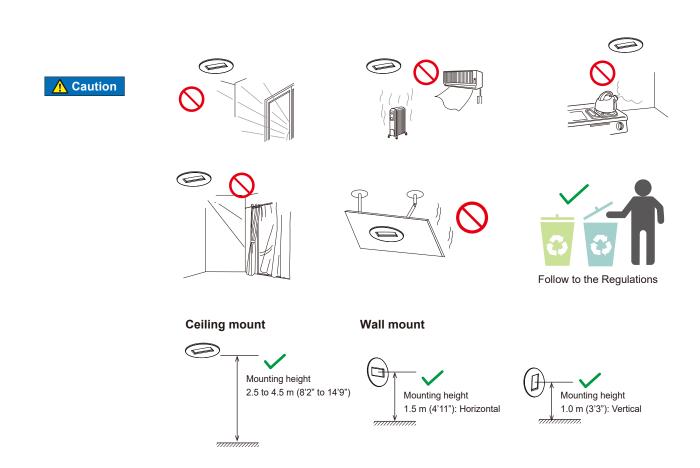


- Parts identifications

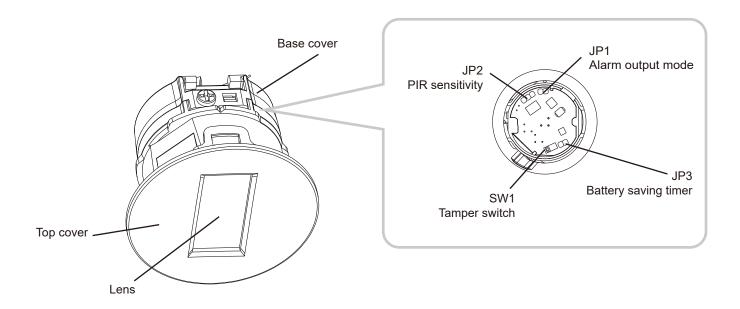

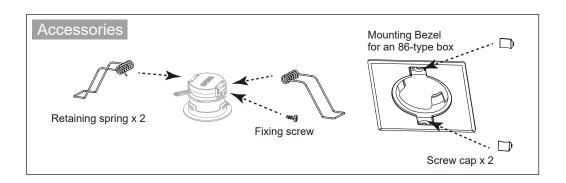

1 Settings

1 Disassemble

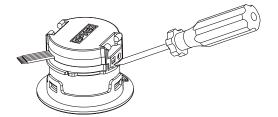


Open the base cover, and to set the detector.

2 Jumper pin settings




Alarm output mode

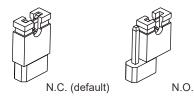


JP2

PIR sensitivity

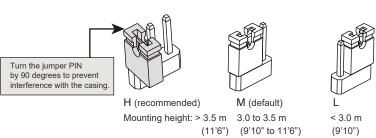


JP3

Battery saving timer

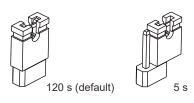


3 Assemble

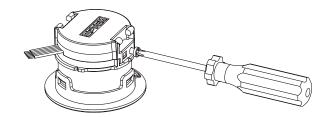


Close the base cover, and fasten the screw to fix the cover.

2 Installation

2-1. Ceiling mount without switch box

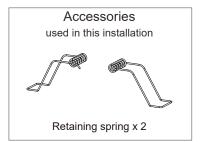


2 Make a ø45 mm (1.77") hole in the ceiling for mounting.

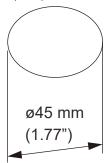



Install a retaining spring on both sides.

(follow the illustrated arrow steps to complete the assembly of the retaining spring.)

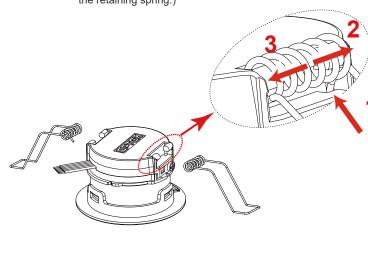



3 Insert the detector into the hole so that the retaining springs come first.

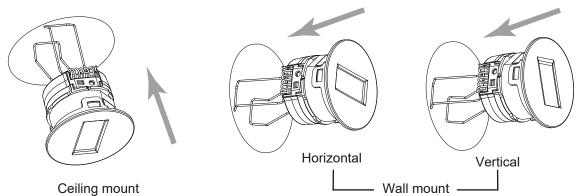

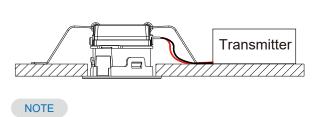

Be sure to arrange the wires with a downward slope to prevent water igress into the detector.

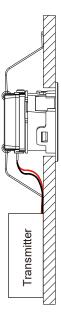


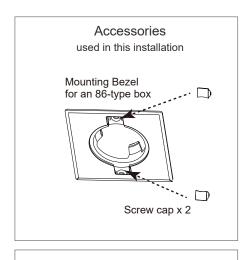


Options to procure in the market

86-type box x 1 or 2 Screw x 2 NOTE

For the 86-type box mount, dual 86-type boxes are recommended with the additional one used to accommodate the transmitter.

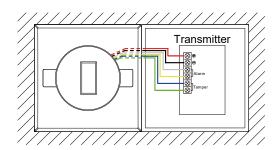



1 Prepare an 86-type box on the ceiling.

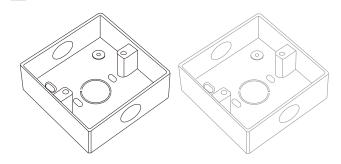

2 Install the detector into the 86-type box.



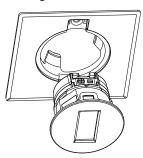


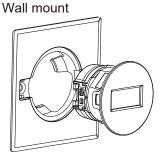







Align the bump with the triangle recess as illustrated in the figure.

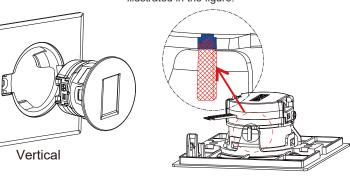


3 Fix the detector with two screws and cover their heads with two caps.

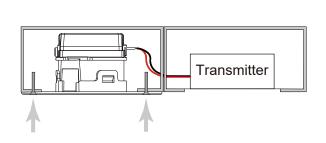

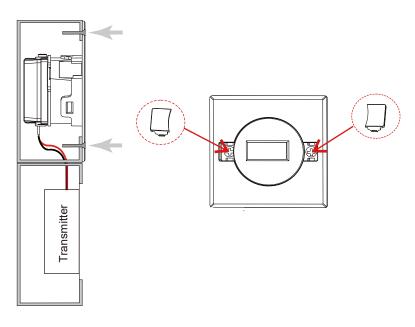

2-3. Wiring




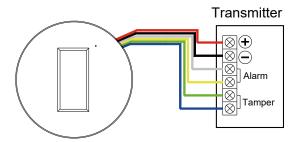

3 Checking


3-1. Walk test

1 Power on.

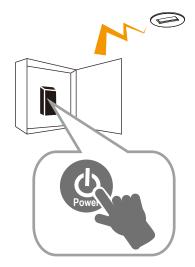



2 Wait for 60 seconds to complete the warm-up time.



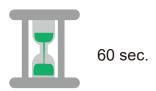

- 3 Walk in the detection area to check the detecting performance.
- 4 Start operation.

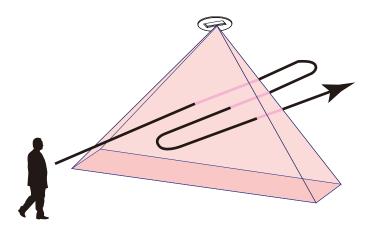

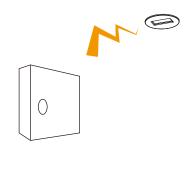


- Specifications

Model	AP-20NBR(C)		
Detection method	Passive infrared		
Detection area	<pre>< Ceiling mount > 6.0 m x 1.0 m (20' x 3'3") at 4.5 m (14'9") height</pre>	< Wall mount > 6.0 m x 4.5 m (20' x 14'9") at 1.5 m (4'11") height	
Mounting height	2.5 m to 4.5 m (8'2" to 14'9")	1.5 m (4'11"): Horizontal 1.0 m (3'3"): Vertical	
Mounting type	Recessed ceiling mount/ Wall mount/ 86-type box mount		
Sensitivity	2.0°C at 0.6 m/s (3.6°F at 2'/s)		
Detection speed	0.3 to 3.0 m/s (1'/s to 9'10"/s)		
	Warm-up upon power on: blinking		
LED indicator	Stand-by: off		
LED Maleator	Walk test: solid on		
	Alarm: off		
Alarm cycle	Approx. 2 s		
Battery saving timer	120 s/ 5 s selectable		
Alarm output	N.O./N.C., 3.6 V DC 10 mA max.		
Tamper switch	N.C. 28 V DC 100 mA max. The contact opens once the casing is detached.		
Warm-up time	Approx. 60 s		
Power supply	2.7 to 3.6 V DC (CR123A battery)		
Current	3 V DC Stand-by: 10uA, Max.: 4 mA		
PIR sensitivity	H/ M/ L		
Weight	50 g (1.76 oz)		
Operation temprature	-20 to +50°C (-4°F to +122°F)		
Operation humidity	< 95%		
Location	Indoors		
Dimensions	ø52 x 35.5 mm (ø2.05 x 1.40 in.): without switch box mount		
	86 x 86 x 36.5 mm (3.39 x 3.39 x 1.44 in.): with 86-type box mount		


- Specifications and designs are subject to change without prior notice.
- These units are designed to detect an intruder and activate an alarm control panel. Being only a part of a complete system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion.

- Dimensions

Without switch box mount

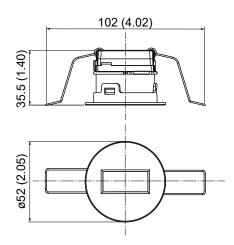


With 86-type box mount

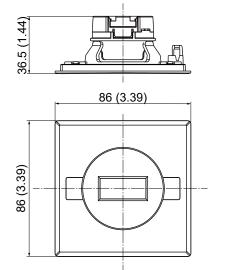

Unit: mm (inch)

- Detection area




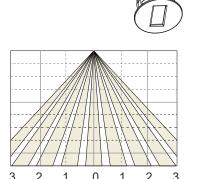

0

L

3'3" 6'7" 10')

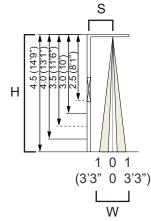

Maximum detection area

Mounting height (H)	2.5	3.0	3.5	4.0	4.5
	(8' 2")	(9' 11")	(11' 6")	(13' 1")	(14' 9")
Area depth (W)	0.6	0.7	0.8	0.9	1.0
	(2')	(2' 4")	(2' 7")	(2' 11")	(3' 3")
Area width (L)	3.3	4.0	4.6	5.4	6.0
	(10' 10")	(13' 1")	(15' 1")	(17' 7")	(20')
Recommended distance to the wall (S)	0.7 (2' 4")	0.8 (2' 7")	0.9 (2' 11")	1.0 (3' 3")	1.2 (3' 9")

Unit: m (ft., in.)

Wall mount


6'7"


(10'

3'3"




Horizontal

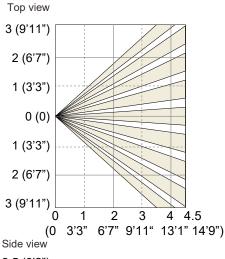


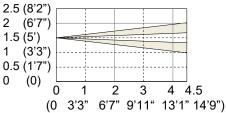


Top view



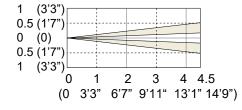

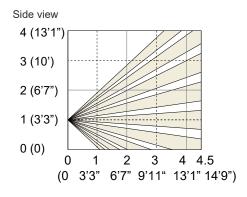

- Timing chart

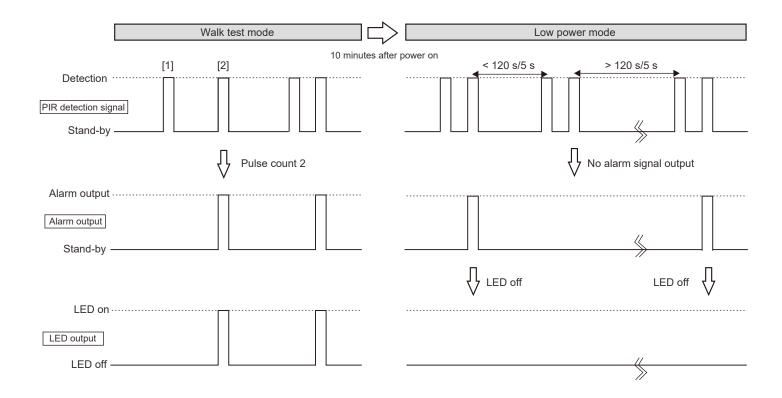

- Troubleshooting

Problem	Cause	Solution
The LED is off.	The power supply voltage does not meet the requirement due to disconnection from the power supply or low voltage.	Check the power supply of the detector. Refer to "Specifications" on the page 9 for the power supply voltage.
	Incorrect detection area.	Adjust the detection area. Refer to "Detection area" on the page 10.
	The detector is in low power mode.	Power on the detector again if an additional walk test is needed.
The LED is on even there is no person in the detection area.	A moving object exsts in the detection area, such as a fluttering curtain or a swinging wall-mounted pendant.	Remove the moving object from the detection area or change the detector location.
	The temperature changes rapidly in the detection area due to a heat source, such as a radiator or air conditioner.	Remove the heat source fron the detection area or change the detector location.
The LED is on but the detector	Relay contact abhesion or damage occurs due to overload.	Check the output load. Repair or replace the damaged part.
does not transmit signals.	Improper wiring.	Connect the wires for the detector correctly.
The detector fails to warm up in 60 seconds after power on and	A moving object exista in the detection area during the warm-up period of the detector.	Be sure that there is no moving object in the detection area during the warm-up period of the detector.
the LED blinks continuously.	The detector fails to work properly.	Repair or replace the detector.

- Compliance





https://navi.optex.net/cert/contact/



OPTEX INC./AMERICAS HQ (U.S.)

OPTEX (EUROPE) LTD./EMEA HQ (U.K.) www.optex-europe.com

OPTEX SECURITY B.V. (The Netherlands) www.optex-europe.com/nl

OPTEX CO., LTD. (JAPAN) www.optex.net

OPTEX SECURITY SAS (France) www.optex-europe.com/fr

OPTEX SECURITY Sp.z o.o. (Poland) www.optex-europe.com/pl

OPTEX PINNACLE INDIA, PVT., LTD. (India) www.optexpinnacle.com OPTEX KOREA CO.,LTD. (Korea) www.optexkorea.com

OPTEX (DONGGUAN) CO.,LTD.
SHANGHAI OFFICE (China)
www.ontexchina.com

OPTEX (Thailand) CO., LTD. (Thailand) www.optex.co.th

Copyright (C) 2022 OPTEX CO.,LTD.